

TIME SETTING INSTRUCTIONS

IPL, SCL & SCL2 SERIES - SOLAR LED COMMERCIAL LIGHTS

*****IMPORTANT*****

**BEFORE INSTALL, RECORD SERIAL NUMBER AND PASSWORD
LOCATED ON THE CONTROLLER LABEL INSIDE THE DOOR**



For this solar luminaire to work properly, you **MUST** set the light's clock at the time of install. This can be accomplished by connecting a luminaire to First Light's iOS app via Bluetooth.

TO SET LIGHT'S CLOCK

1. Download First Light's Solar Light Control app to an Apple device from the App Store.
2. Open the Solar Light Control app when within 20 feet of the light.
3. Select the light that is being installed by its serial number from the "Nearby Lights" menu.
4. Enter the password and hit "Login." The app will then authenticate the light and set the local time, including any applicable daylight savings information. The app will display the lighting profile settings indicating that you have successfully set the time.
5. Disconnect from the light by tapping back to the "Nearby Lights" button at the top left of the screen.
6. Repeat these steps for each light being installed. The password will not need to be entered again as it is now stored on your device and the nearby lights screen will show which lights you have already connected with.

TIPS

- Record the serial numbers of the lights you have connected to and ensure the number of lights on your list matches the number you have installed.
- Scroll the nearby lights list to ensure you have set the time on every light.