

7. Install the WLB Head Assembly onto the Pole and secure in place with three of the supplied #20 Flathead Machine Screws, and continue to tighten evenly until satisfied. Installation is complete (Fig. 8)

MAINTENANCE:

- f* If panel becomes soiled, clean with a soft damp cloth to maintain optimal performance.
- f* Do not use any abrasive materials or detergents.

TROUBLESHOOTING:

The Light DOES NOT turn on when battery is connected.

- f* Check the Battery Harness Polarities. Wire must be connected to Positive (+) Terminal and Black Wire must be connected to Negative (-).
- f* If Harness is connected correctly, measure Battery Voltage, which should be between 6.6 Volts, and 6.8 Volts. If it is significantly less, please contact customer service.

The Light flashes times when the Battery is connected.

- f* The Battery State of Charge is lower than optimal, please contact customer service.

ANCHOR BOT TEMPLATE:

Dimensions are in inches. Not to Scale
Ensure the bolts are vertical and centered on the dimensions shown

